




INSTALLATION INSTRUCTIONS

413PN & 423P ADJUSTABLE PNEUMATIC TIMER DPST PUSH SWITCH

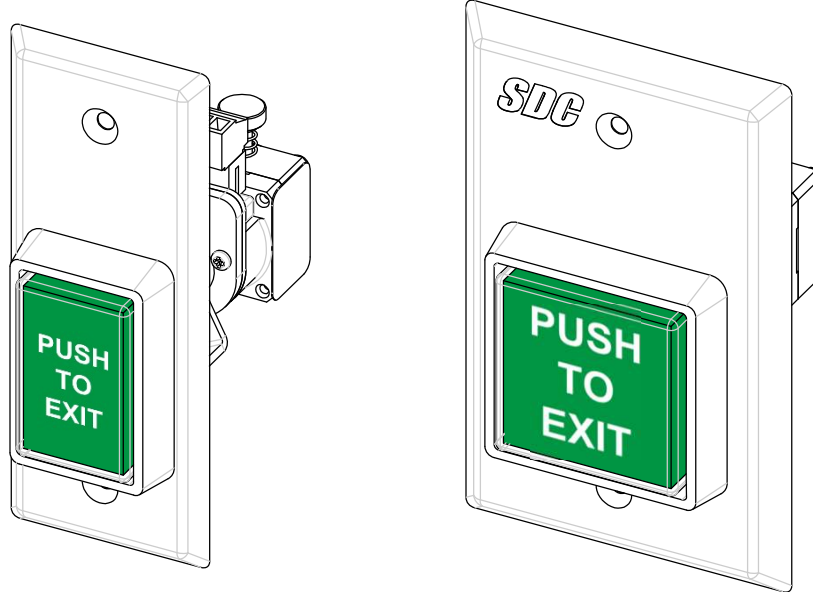


Specifications


Switch Type	DPST
Switch Contact:	Form Z 3A@30VDC (Resistive) 5A@125VAC
Timer:	1-45s Adjustable Pneumatic Timer
Assembly Dimensions	423P 4-5/8" x 2-7/8" x 3-1/8" 413PN 4-1/2" x 1-3/4" x 3-1/8"

Optional Faceplate LED Wiring

 
Single Color LED Wiring (L1G, L1R, or L2)



Tri-Color LED Wiring (LT)

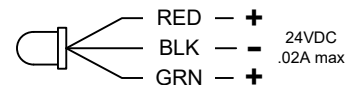


- Apply (+) VDC to RED wire to illuminate RED
- Apply (+) VDC to GRN wire to illuminate GREEN
- Apply (+) VDC to both GRN & RED wire to illuminate AMBER

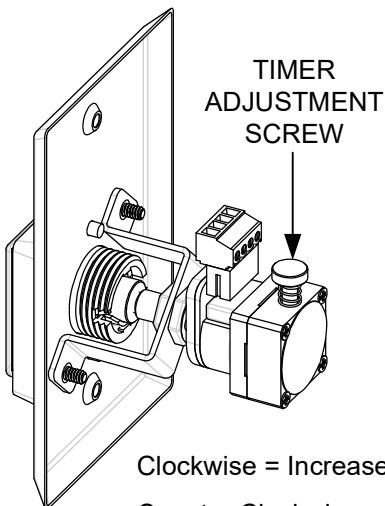


Clockwise = Increases Time

Counter Clockwise = Reduces Time

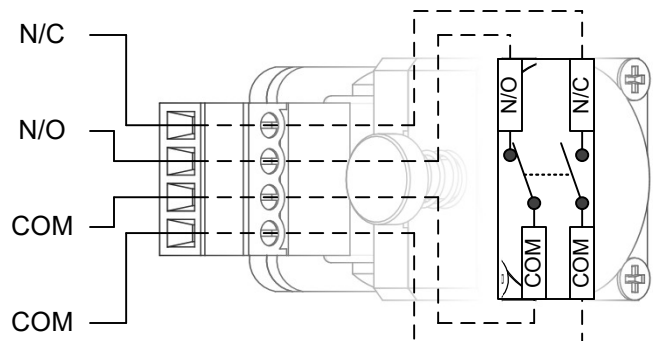



DIMENSIONAL REFERENCE

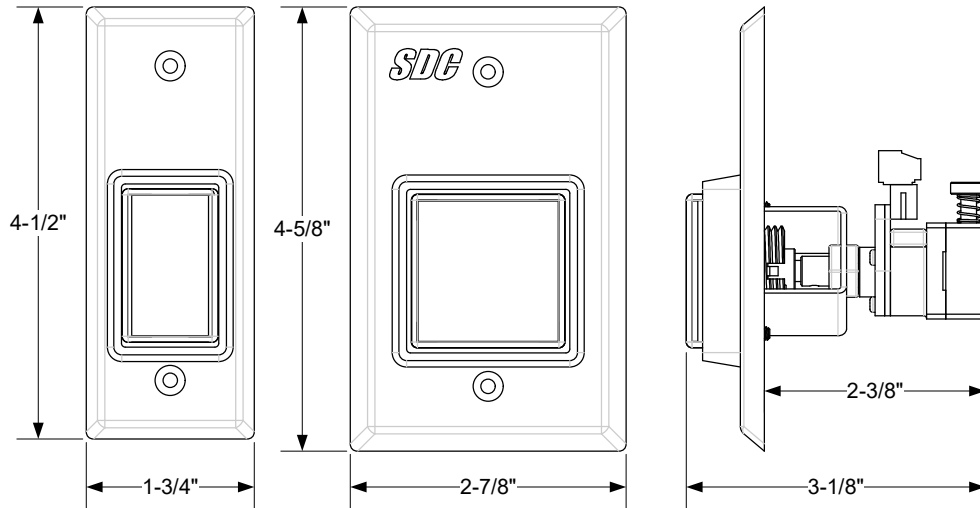

CHANGING SIGNAGE

To change the display sign, the clear lens must first be removed. Use a utility knife or similar blade to gently pry up the lens with a twisting motion as shown below. To replace the lens, press it into the switch until it snaps in place.

