



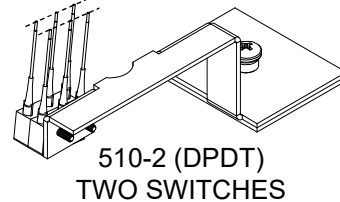

INSTALLATION INSTRUCTIONS

510 & 510-2 MONITORING SWITCH KITS VON DUPRIN 33, 35, 98 & 99

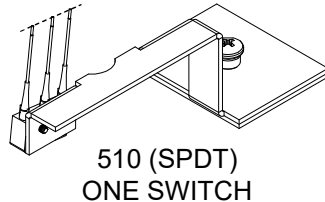


Specifications

Switch Type: SPDT (Form C)
Switch Contact Rating: 5A @ 30VDC (Resistive)

Wiring

White = COM
Yellow = N/O
Orange = N/C

Panic Device Install

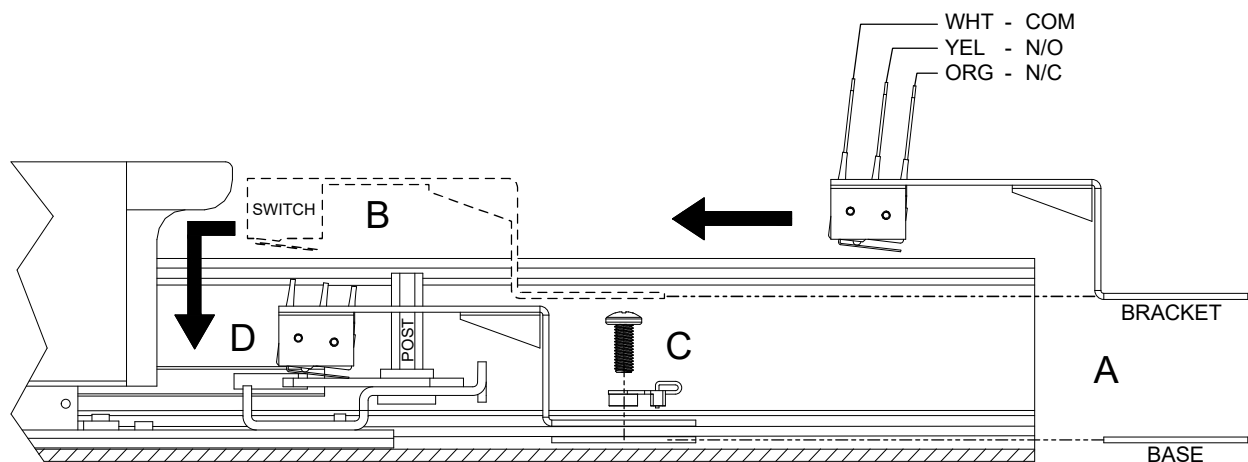

- (A) SLIDE BASE THROUGH SLOT AT BOTTOM OF BAR.
- (B) SLIDE BRACKET OVER DOGGING ASSEMBLY UNTIL SWITCH CLEARS POST.
- (C) DROP AND ALIGN BRACKET OVER BASE SECURING SWITCH ASSEMBLY WITH SCREW PROVIDED.
- (D) MOVE ASSEMBLY FORWARD UNTIL PROPER SWITCH ACTIVATION IS ACHIEVED AND TIGHTEN SCREW.