





INSTALLATION INSTRUCTIONS

510-F & 510-F-2 MONITORING SWITCH KITS VON DUPRIN 33, 35, 98 & 99

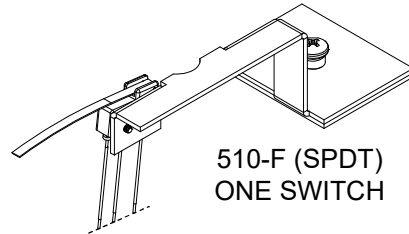

510-F (SPDT)
ONE SWITCH

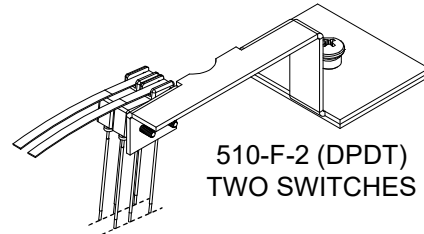

510-F-2 (DPDT)
TWO SWITCHES


Specifications

Switch Type: SPDT (Form C)
Switch Contact Rating: 5A @ 30VDC (Resistive)

Wiring

White = COM
Yellow = N/O
Orange = N/C

Fire Device Install

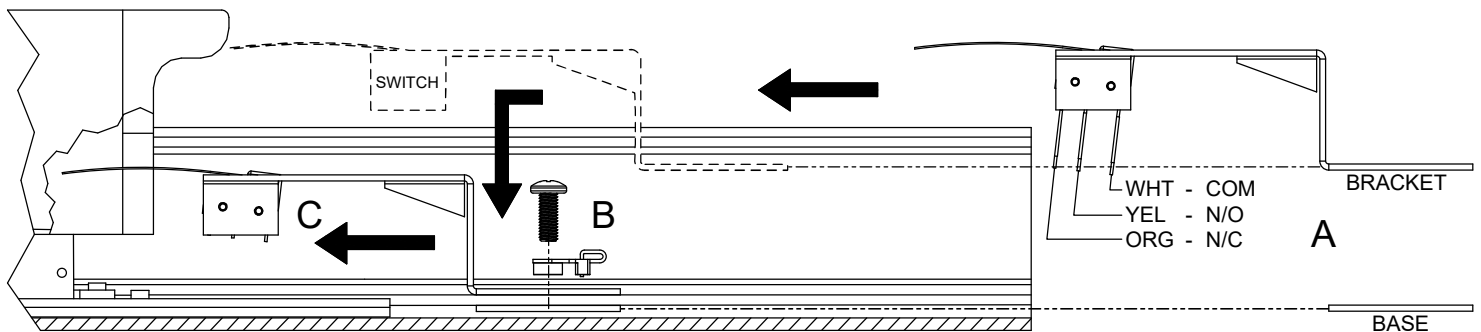

(A) SLIDE BASE THROUGH SLOT AT BOTTOM OF BAR.

(B) DROP AND ALIGN BRACKET OVER BASE SECURING SWITCH ASSEMBLY WITH SCREW PROVIDED.

(C) MOVE ASSEMBLY FORWARD UNTIL PROPER SWITCH ACTIVATION IS ACHIEVED AND TIGHTEN SCREW.