



INSTALLATION INSTRUCTIONS


512 MONITORING SWITCH KIT VON DUPRIN 88 SERIES

Specifications


Switch Type: SPDT (Form C)
Switch Contact Rating: 5A @ 30VDC (Resistive)

Wiring

White = COM
Yellow = N/O
Orange = N/C

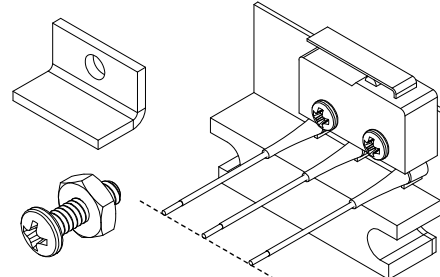

512 SWITCH KIT

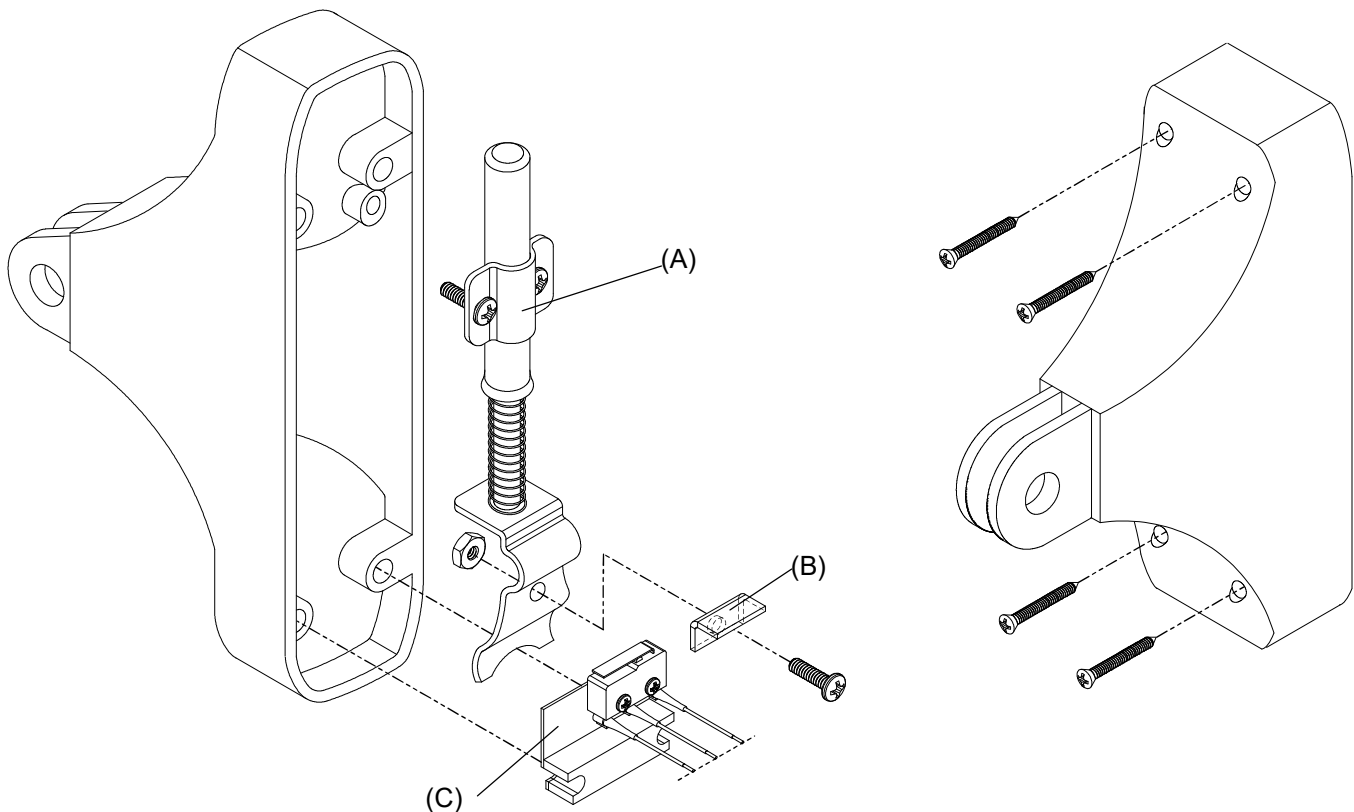

1. CONNECT WIRES.
2. REMOVE BRACKET (A) TO REMOVE SPRING ASSEMBLY.
3. MOUNT SWITCH ANGLE BRACKET (B), USE SCREW AND NUT PROVIDED.
4. PLACE SPRING ASSEMBLY BACK INTO HOUSING.
5. POSITION SWITCH KIT ASSEMBLY (C) AS SHOWN AND TO SECURE DOOR.